Suggested Typical Installation Outward Opening Details SL 70 System Interior Surface Mounted Sill - Option 1 (Interior applications only) **Head Track** FINISH FLOOR FINISH FLOOR Panel Hinged at Flush Sill Higher Weather Performance Sill Right Side Jamb (Interior applications only) Condition: Sill sits on top of the floor slab (Shown without shim space but allow as needed) Low Profile Saddle Sill - Option 2 Interior Surface Mounted Sill - Option 2 The top of the finish floor is at the bottom of the sill flanges. (If no water rating needed) (Interior applications only)  ${\underline{\rm NOTE}}_{:}$  IF THE FINISH FLOOR IS AT A DIFFERENT LEVEL THAN SHOWN, APPROPRIATE LANDING ON BOTH SIDES OF THE THRESHOLD WITH ADA-COMPLIANT SLOPE MUST BE FLOOR SLAB Location of various holes per the Low Profile Saddle Sill Option 1 Drawing Condition: Ability to cut into the floor slab. The floor slab is the finished floor. Allow shim space as needed. INSTALLER NOTE: L.P.S.S. IS NOT CENTER ON THE UNIT. 6 1/16" [154] Low Profile Saddle Sill Option 1 Detail Drawing A Drill holes all the way to the **B** - Ø5/16"(8) back as shown at a slight angle Low Profile Saddle Sill - Option 1 upwards. Before creating the 3/8" (10mm) drainage hole, we recommend For any water rating, weep holes drilled in the sill using a smaller drill bit to create and drain connections by others necessary. a pilot hole. Please see Low Profile Saddle Sill Option 1 Detail **B** Drill holes as shown. Drawing on the right side for weep hole sizes, **B** - Ø5/16"(8) pattern and spacing by others Note: A: Drill 3/8" (10 mm) hole in location shown. **A** - Ø3/8"(10) B: Drill 5/16" (8 mm) hole in location shown. SPECIFICATIONS AND DETAILS SUBJECT MAKE SURE THAT ANY FASTENER HOLES AND EACH END OF THE SILL ARE SEALED PROPERLY. TO CHANGE WITHOUT NOTICE BESIDES PROPER WATERPROOFING OF THE JOB SPECIFIC SURROUNDING CONDITIONS, © 2025 NanaWall Systems, Inc. DETAILS OF THE MANAGEMENT OF WATER EXITING THE WEEP HOLES MUST BE DESIGNED AND PROPERLY INSTALLED BY OTHERS. For more information about preparing the rough opening, installation and operation of this folding www.nanawall.com system, please look at the installation and Owner's Manual for the SL 70 System.

D

С

В