


Suggested Typical Installation Outward Opening Details
NW Wood 540

alternative options

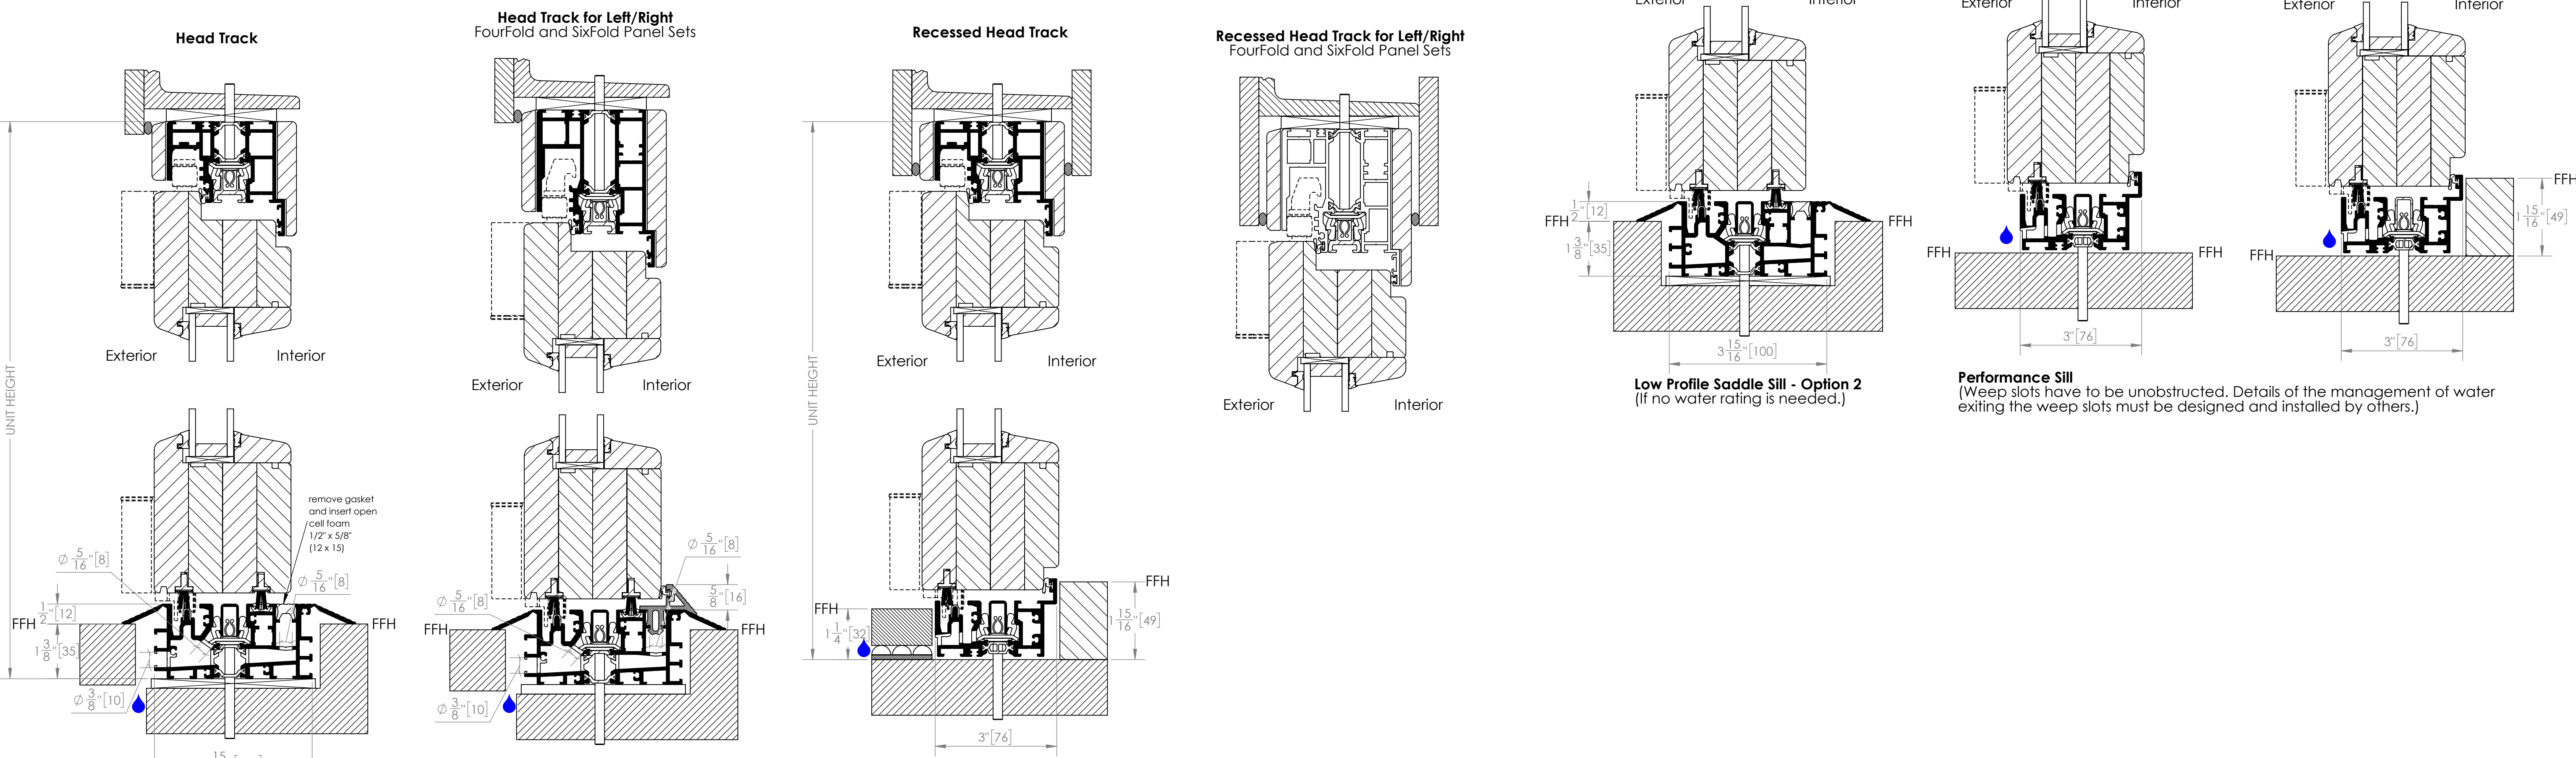


Low Profile Saddle Sill - Option 1
For any water rating, weep holes drilled in the sill and drain connections by others are necessary. Please see Low Profile Saddle Sill Option 1 Detail Drawing on the lower right side for weep hole sizes, pattern and spacing by others.

Low Profile Saddle Sill - Option 1 with UniverSILL
UniverSILL can be used as a seasonal sill adapter and needs to be cut to length in the field. With the temporary UniverSILL adapter in place, the sill does not meet ADA anymore. Note that for any water rating, the same weep holes and drain connections are needed like for the Low Profile Saddle Sill - Option 1.


Performance Sill
(Weep slots have to be unobstructed. Details of the management of water exiting the weep slots must be designed and installed by others.)

Location of various holes per the Low Profile Saddle Sill Option 1 Drawing

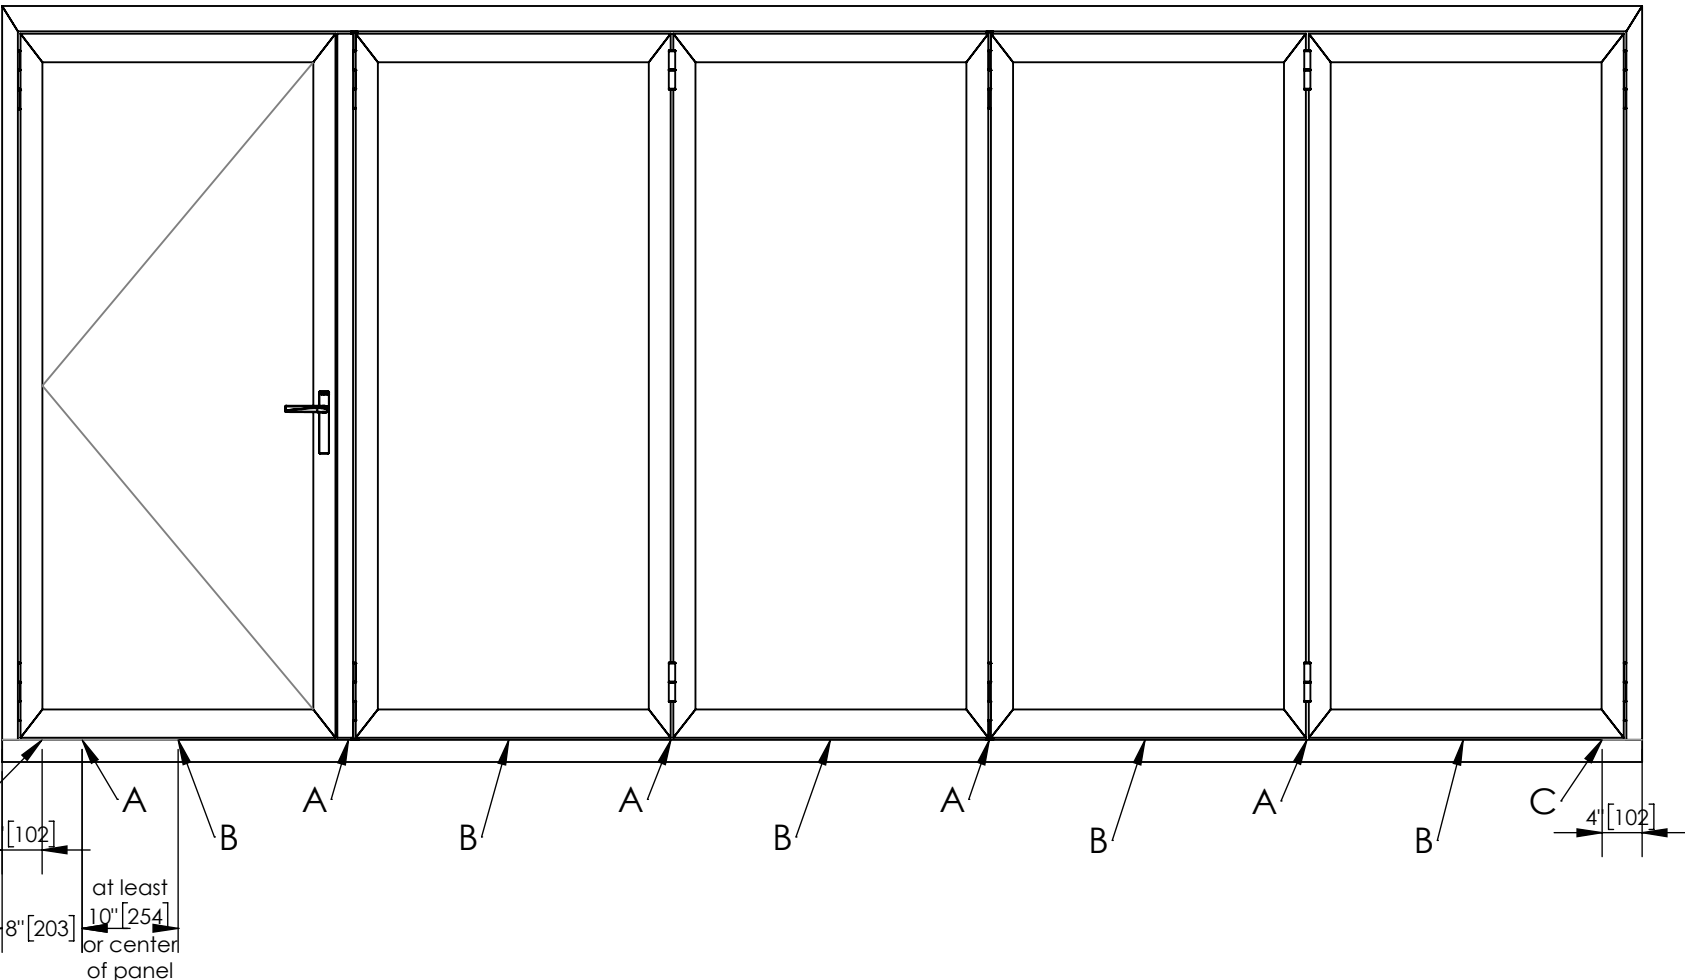

Note: **A:** Drill 3/8" (10 mm) hole in location shown.
B: Drill 5/16" (8 mm) hole in location shown.
C: Drill 1/4" (6 mm) holes at both ends in location shown.

Low Profile Saddle Sill Option 1 Detail Drawing

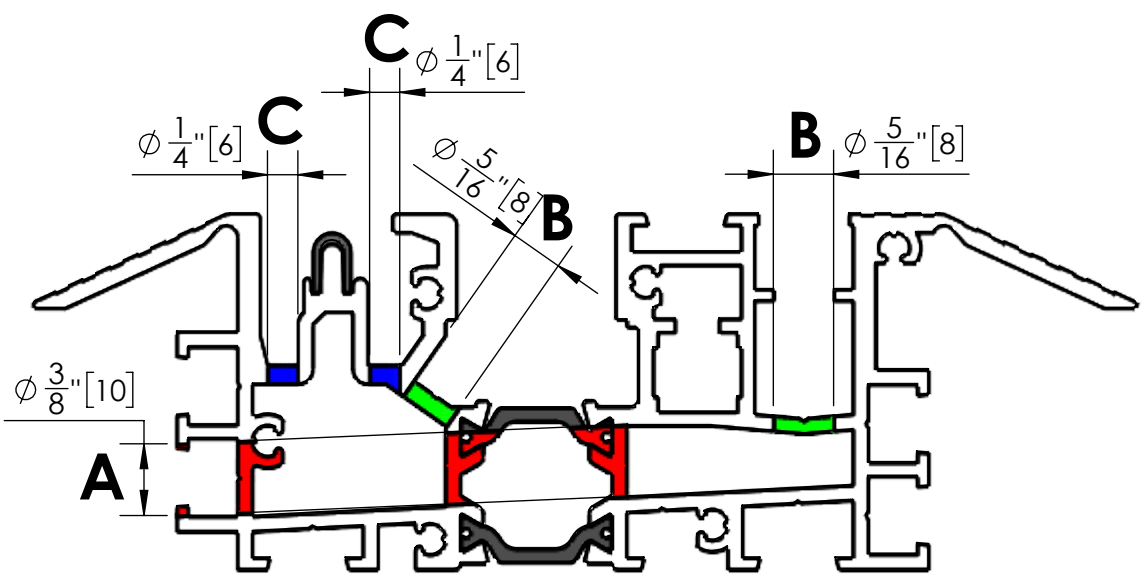

A Drill holes all the way to the back as shown at a slight angle upwards. Before creating the 3/8" (10mm) drainage hole, we recommend using a smaller drill bit to create a pilot hole.

B Drill holes as shown.

C Drill 2 holes as shown at both ends of the channel.

All appropriate water proofing and flashing details to be designed and installed by others. These should include proper sealing of all fastener holes and each end of the sill. For more information about preparing the rough opening, installation and operation of this folding system, please look at the installation and Owner's Manual for the Generation 4 Folding Glass Walls.

SPECIFICATIONS AND DETAILS SUBJECT
TO CHANGE WITHOUT NOTICE
©2026 NanaWall Systems, Inc.
www.nanawall.com